

HTP Mechanical Seal

Installing Grease Zerk

A grease zerk should be installed in order to allow grease to enter the cavity between the O-Rings. Fab a small wire gauge (see attached pic). A metal coat hanger works great. Bend it into a U shape and set the depth to reach the back of the seal cavity. Set the wire gauge against the seal and mark the zerk hole center. After marking the gauge, you can put it back in against the back of the cavity where the mechanical seal seats and mark where to drill for the zerk. Drill the hole about 30 degrees forward into the cavity. The end of the Mechanical Seal that has 2 seals in it always goes towards the front of the boat.



Please call Hi-Tech Performance Inc. for assistance 417-858-8616

