


HTP Water Bypass System

417-858-8616

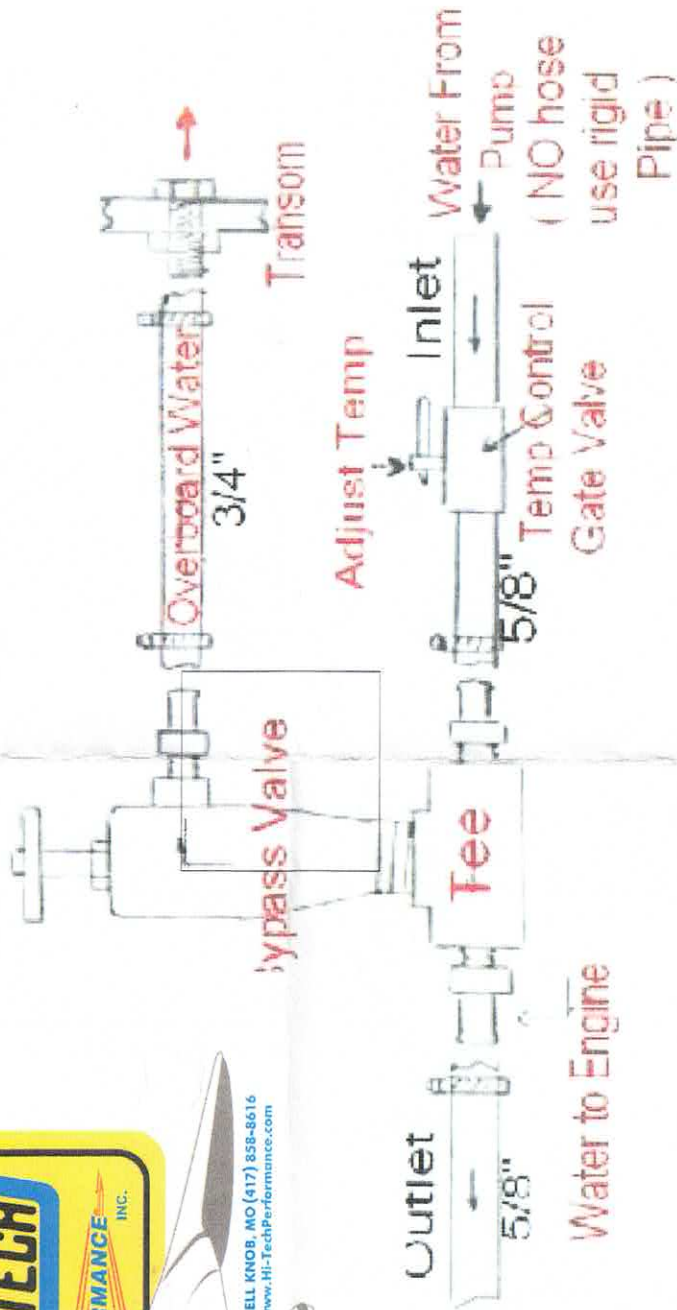

The pressure on this valve was preset before shipment. DO NOT attempt to adjust it. Use a rigid pipe for connection from the pump to the bypass unit. Hose will blow out. This bypass unit lets 15 to 20 lbs. of water pressure to the motor and puts the rest overboard. Use the gate valve to adjust the engine temperature setting.