


Adjustable Wedge Kit

Operation... For each adjustment, these 2 wedges have to turn the same # of holes in opposing directions.


NOTE: For positive wedge, rotate the rear wedge clockwise and the fwd (green) wedge counter clockwise. For **Negative** Wedge, Rotate the rear wedge counter clockwise and the fwd (green) wedge clockwise.

See Example

0 Degree Example - When the 2 notches on the outside of the wedges are aligned at set a 12 o'clock (up)

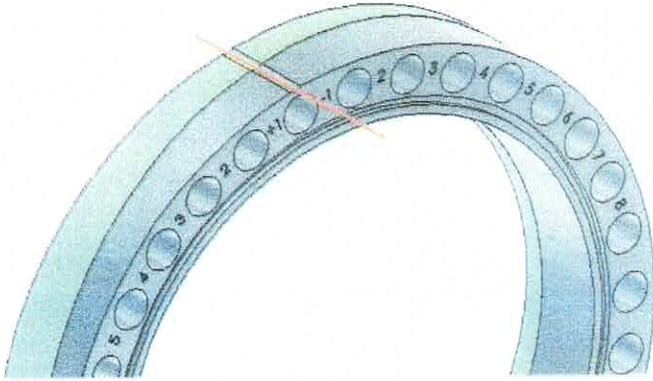

+1 Degree Example – Back wedge left to the fwd wedge – Notches area at 11 and 1 o'clock

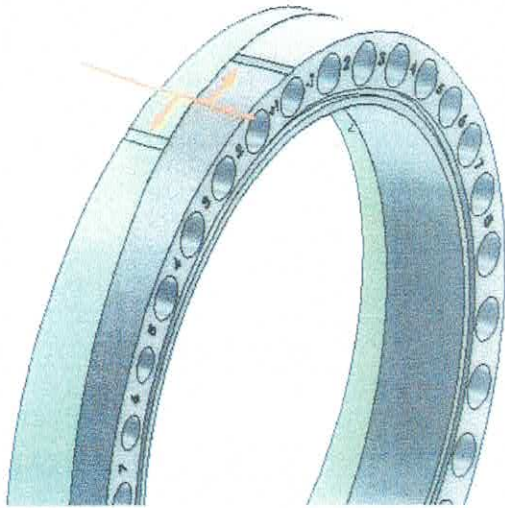

+7 Degree Example

